SECURTRUCK

INSTALLATION INSTRUCTIONS

SECURTANK

SECURTRUCK

The Beacon

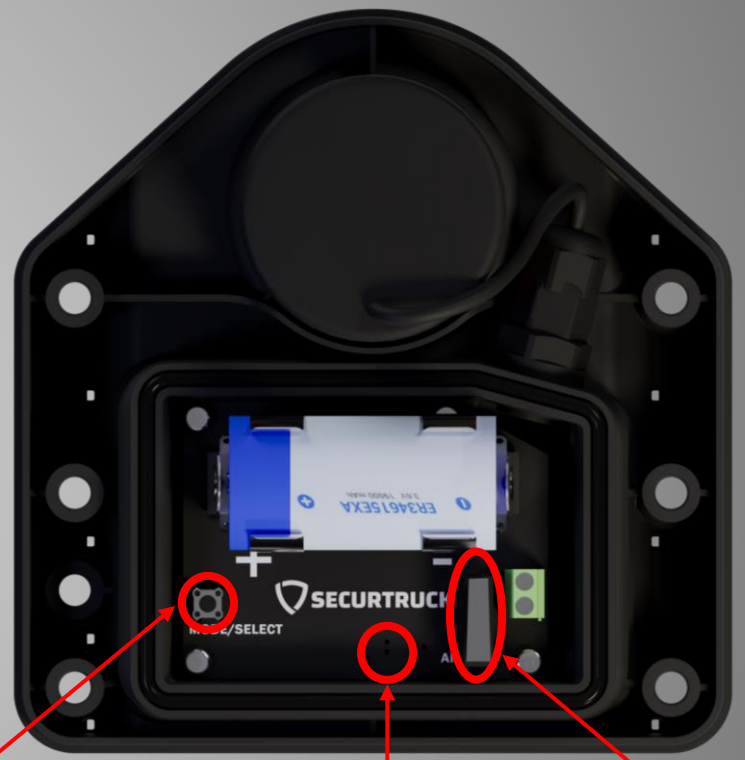

SECURTRUCK

The Controller

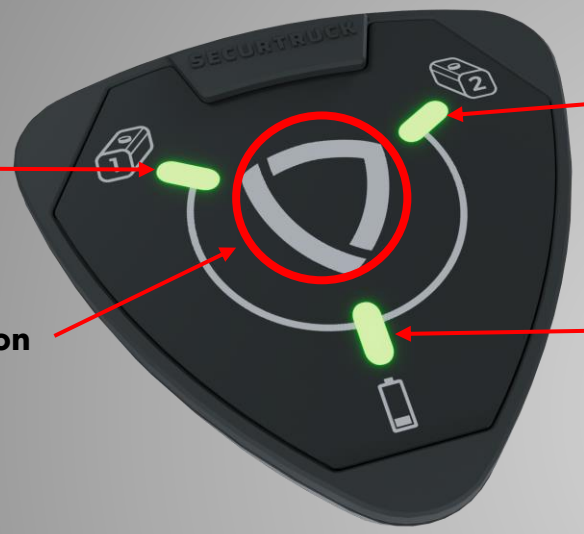

Accessories

Magnetic support

Charging cable

USB/cigarette lighter adapter 12Vdc

SECURTRUCK

Mounting the beacon

Choose the right strap : the one closest to the fifth wheel coupling

SECURTRUCK

Start of mounting

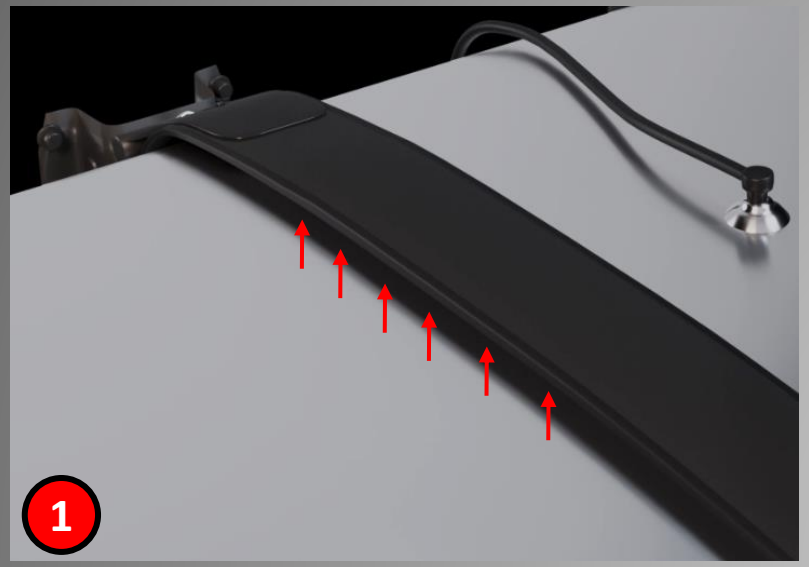

Loosen and raise the strap

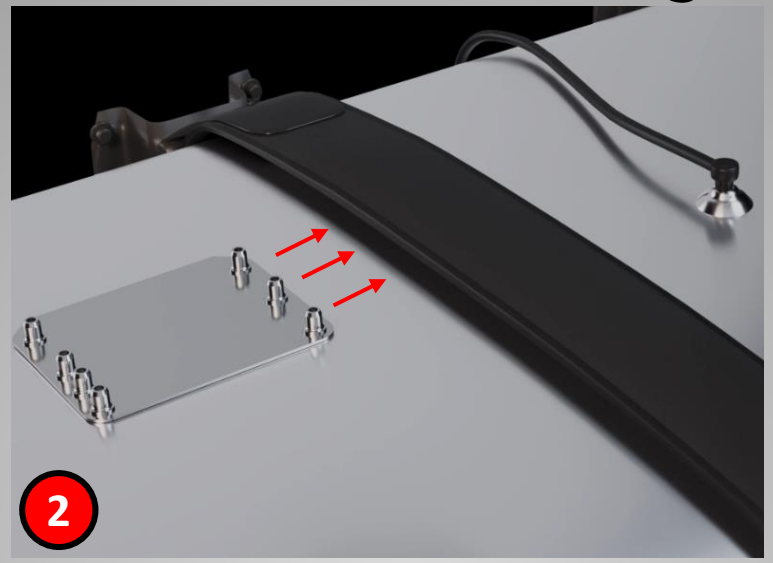

Place the plate below the strap

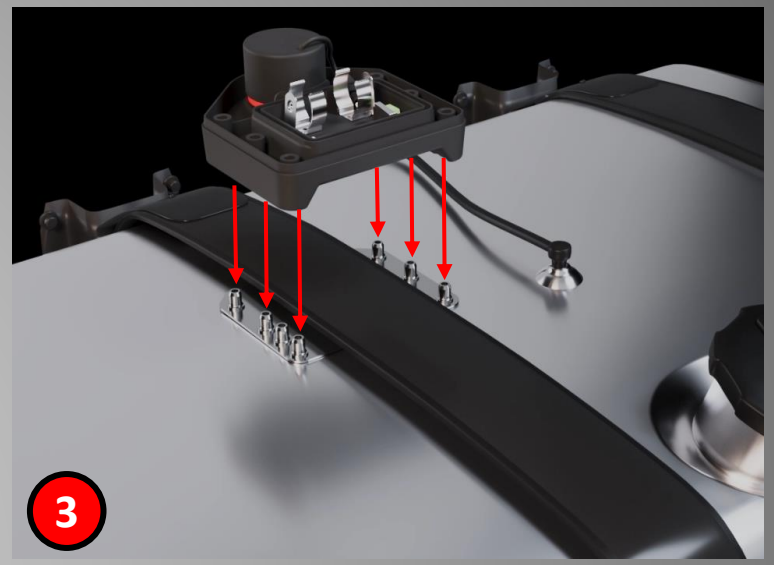

Place the case on the strap and the plate

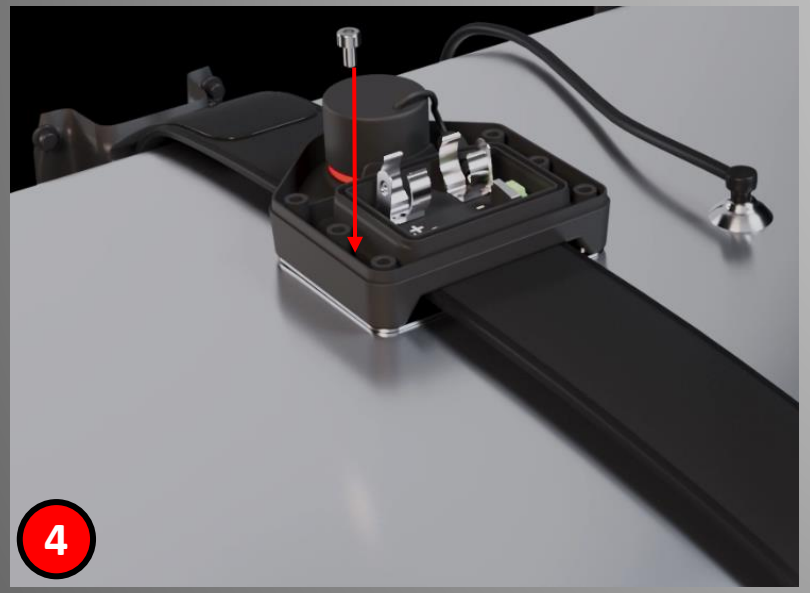

Screw in the anti-tearing screw

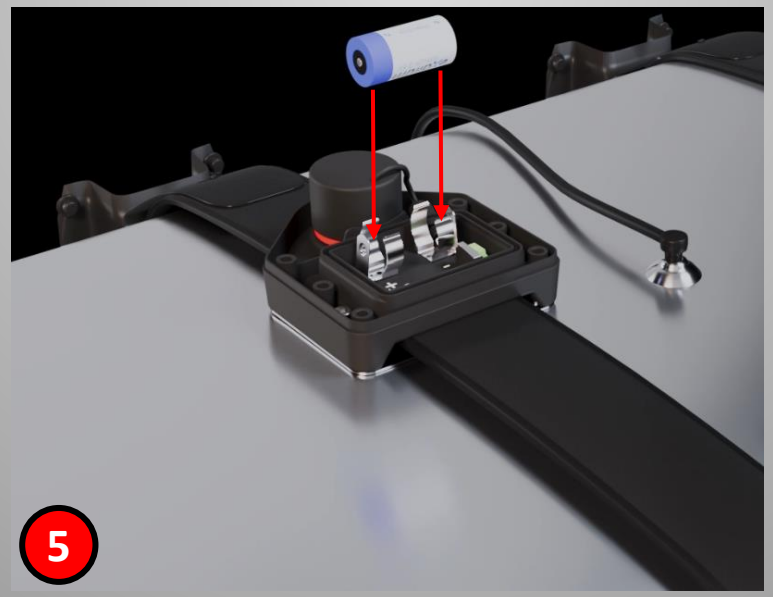

Insert the battery into its holder
(blue part on the left)

The indicator lights orange for 3s

Detection test

To ensure the correct sensitivity setting of the beacon, carry out the following tests:

- opening the cap
- small shocks on the gauge
- small shocks on the tank

→In each case the indicator light should light up red
→If the indicator light does not light up during one of the tests, change the sensitivity (page 7)
→Repeat this operation on the second tank in the case of a 2 tank pack

If a refrigerated trailer, force it to start and ensure that the indicator light does not turn red. Otherwise, modify the sensitivity.

End of mounting

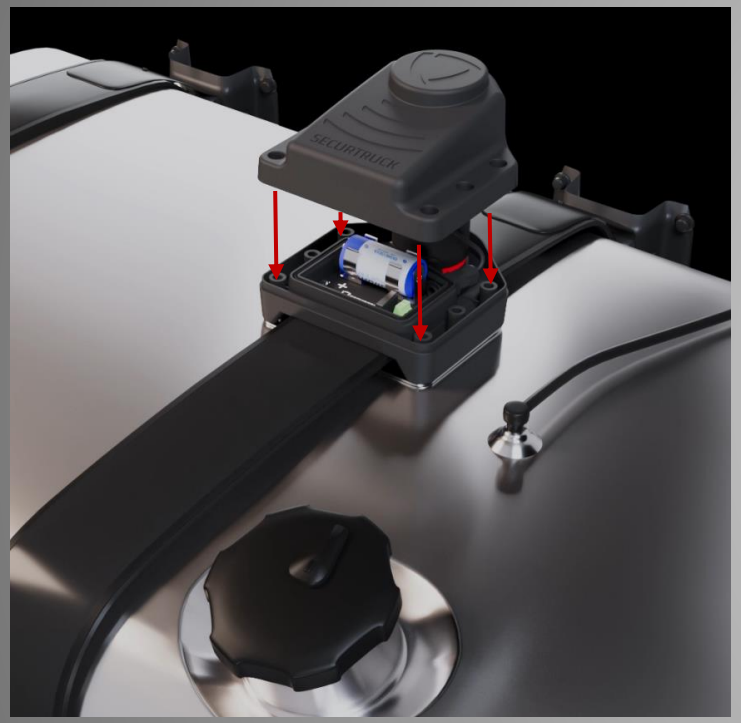

Place the cap on the box

Tighten the 6 closing screws in the order above

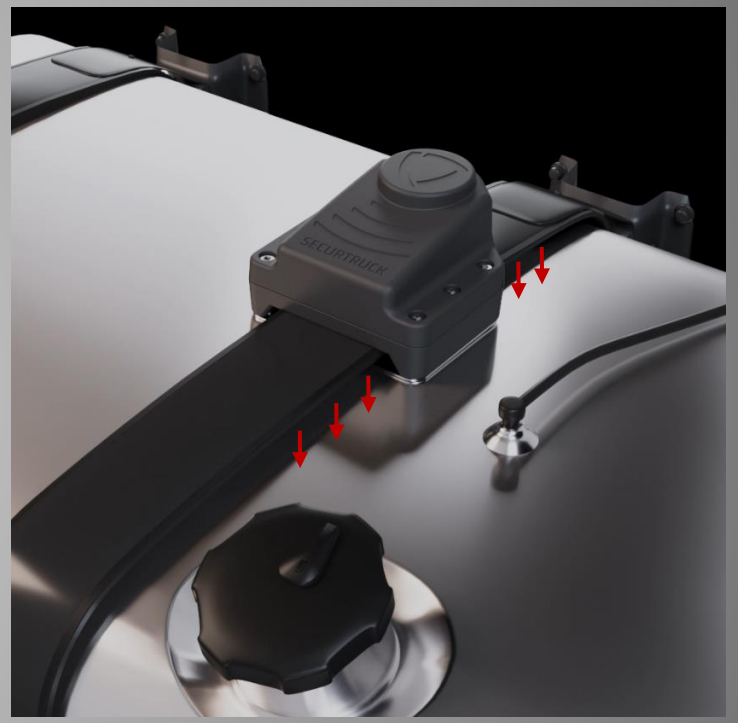

Tighten the strap

SECURTRUCK

Changing the sensitivity

1 Press the “MODE/SELECT” button for 3 seconds

2 The indicator lights up in the color of the selected sensitivity

High sensitive | Medium sensitive | Low sensitive

3 Make a short press to change sensitivity

4 To ensure the correct sensitivity setting of the beacon, carry out the following tests:

- opening the cap
- small shocks on the gauge
- small shocks on the tank

In each case the indicator light should light up red.
If the indicator light does not light up during one of the tests, change the sensitivity

SECURTRUCK

Switching on the controller

1

Press the button for 6 seconds

2

Controller started / monitoring off

Installation recommendation

1. We recommend to install the controller in an easy access area.
2. We recommend to use the magnetic support to install it on a ventilation grid.
3. We recommend to keep the controller connectd to the USB cable.

SECURTRUCK

Enabling monitoring (ALARM ON)

1

Press the button for 3 seconds

2

The tank light turns red + beep, release the button

3

The tank light flashes red

4

The tank light is solid red + 2 beeps, monitoring is activated

SECURTRUCK

Disabling monitoring (ALARM OFF)

1

Short press on the button

2

The tank light turns red

3

Short press on the button

4

The tank light turns solid green + beep, monitoring is deactivated

SECURTRUCK

Changing Sensitivity with the Controller

1

Press the button for 6 seconds

2

The 3 lights turn purple + beep

3

The tank 1 indicator flashes the color of the sensitivity of the beacon

4

Short press on the button to change the sensitivity

5

Tank 1 light green = low sensitive

6

Tank 1 indicator orange = medium sensitive

7

Tank 1 indicator red = high sensitive

8

Press for 3 seconds + beep to switch to tank 2 or exit mode

Installation of SECURTRUCK monitoring app

1

Available on the App Store

Get it on Google play

Download SECURTRUCK app on the store

2

Launch SECURTRUCK app

3

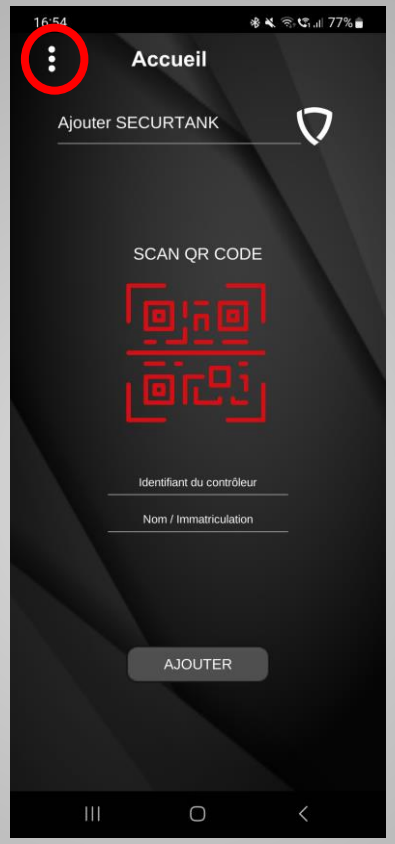

Press menu button

4

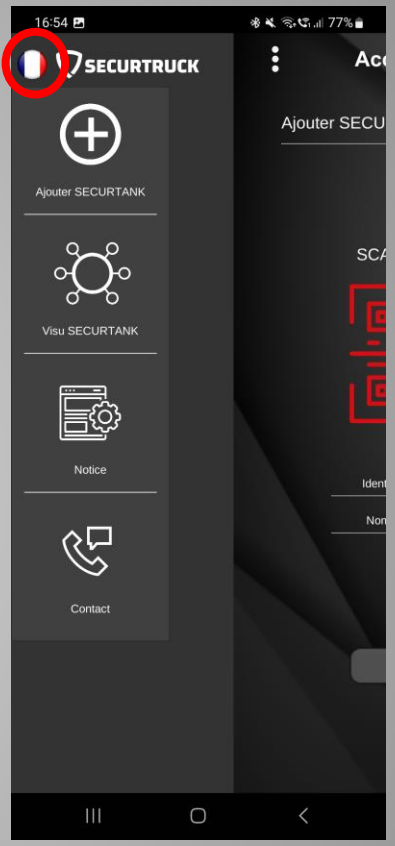

Press language button

5

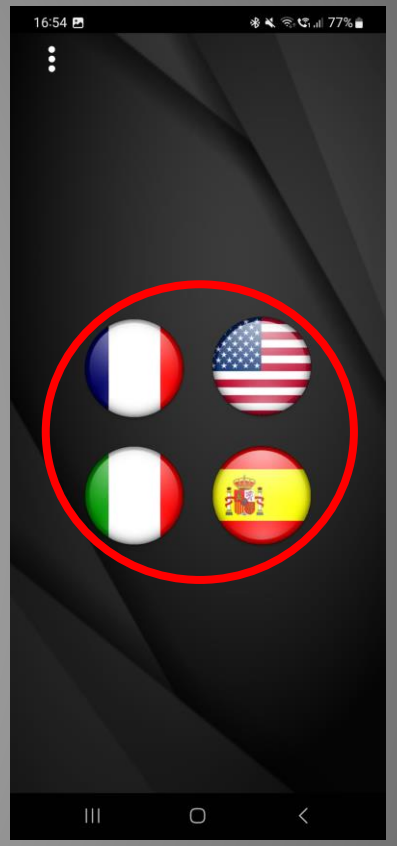

Select the language

Add device on SECURTRUCK app

1

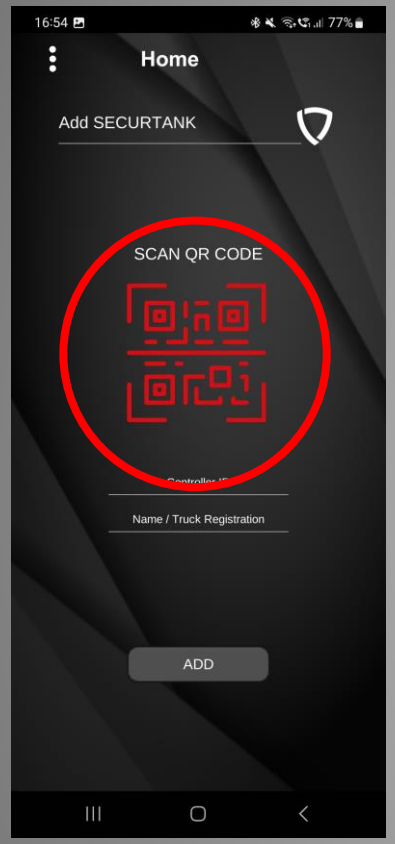

Press QR code button

2

Scan controller QR code

3

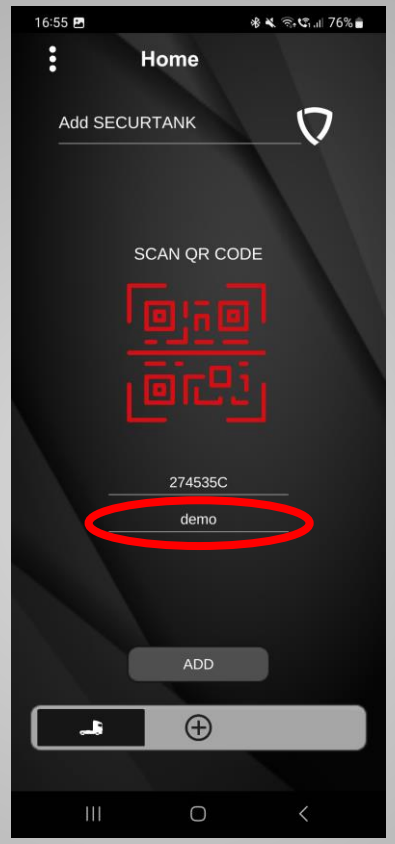

Enter name/ID of the truck

4

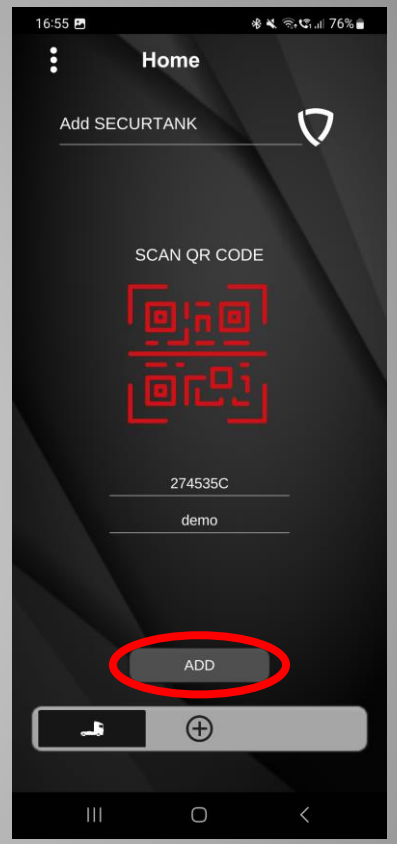

Press “ADD” button

5

Monitoring view

You can add another device by pressing the “+” button